



ERGOSOUL

真無線藍牙耳機說明書

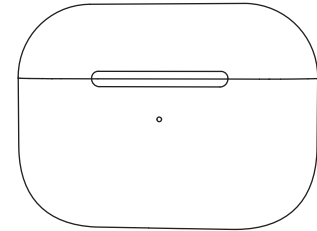

1 外觀示意圖

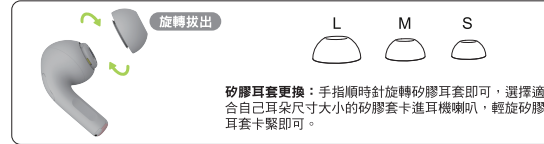

2 簡易操作說明

① 配對耳機：

- 打開耳機充電盒上蓋，耳機自動開機。配對時耳機請置於充電盒中不用取出。
- 打開手機：設置 > 無線網路 > 藍牙 > 打開 > 掃描查找設備。(選單可能因設備不同而不同)

- 選擇 "ERGOSOUL"，如果手機要求輸入密碼，請輸入 0000。
- 手機顯示連接成功後即可使用。

② 開機：

放入充電盒上蓋子5秒開機；長按觸控區域12秒，開機；或開機3分鐘無連接設備，自動開機。

3 功能定義說明

① 通話狀態下功能定義

來電耳機提示	手機自帶鈴聲
來電接聽	來電觸碰1下 左/右耳 接聽(左/右耳都可以)
掛電話	來電觸碰1下 左/右耳 掛斷(左/右耳都可以)
來電拒接	長按1秒左右耳聽到提示音後鬆手拒接電話(左/右耳都可以)

② 音樂狀態下功能定義

播放/暫停	單擊(左/右耳)，提示音："噠"
上一曲/下一曲	上一曲：雙擊左耳，提示音"噠"噠" 下一曲：雙擊右耳，提示音"噠"噠"

③ 語音助手

語音助手	長按左耳3秒 "滴" 聲提示後鬆手喚醒(蘋果或安卓皆可)
------	------------------------------

④ 開啟/關閉降噪、通透模式

開啟/關閉降噪、 通透模式	長按左耳3秒 "滴" 聲提示後鬆手切換降噪、通透、關閉三種模式
------------------	---------------------------------

⑤ 主從切換

主從切換	左右耳隨意回連手機，自由切換，撥機秒回連； 耳機放入充電盒進入充電狀態，沒有開機；合蓋5秒後耳機關機。
------	--

⑥ 更換藍牙名稱

更改藍牙名稱	在手機藍牙設置中，點擊藍牙名稱跳轉至修改藍牙名稱輸入框輸入新藍牙名稱後點擊完成
--------	---

⑦ 入耳檢測

入耳檢測	TWS耳機配對成功後第一支耳機入耳提示音 "咚"，第二支入耳後無提示音(安卓手機長按觸控區域8秒關閉/開啟入耳檢測功能，提示音 "滴")
------	--

4 提示音說明

提示項	提示音說明
開機	提示音："噠"
連接手機	提示音："咚"
斷開手機	提示音："咚"
電池低電量提示	提示音："噠" "噠"
入耳檢查	提示音："咚"

5 充電倉定義和參數

① 充電倉指示燈狀態

序號	產品狀態	指示燈定義
1	左耳放入/取出充電倉	綠燈慢閃一次
2	右耳放入/取出充電倉	白燈慢閃一次
3	左耳充電	綠燈慢閃
4	右耳充電	白燈慢閃
5	充電倉充電	綠燈常亮
6	充電倉充滿電時	綠燈亮1分鐘後滅
7	清除配對按壓按鍵3秒	白燈閃3次

② 充電倉電量顯示

序號	產品狀態	指示燈定義
1	充電倉開蓋	充電倉電量20%以上，開蓋綠燈亮10秒； 充電倉電量20%以下，開蓋綠燈亮10秒
2	充電倉關蓋	充電倉電量20%以下，開蓋綠燈亮3秒； 充電倉電量20%以上，開蓋綠燈亮3秒
3		合蓋約5秒，耳機關機

序號	功能	描述
1	電池容量	360mAh
2	充電方式	Lightning接頭
3	充電電壓/電流	5V 1A
4	充電倉充電時間	約80分鐘
5	續航能力	約充電3~4次(雙耳充電)
6	工作溫度/儲存溫度	-10°C~50°C / -20°C~65°C

6 無線充電指示說明



無線充電區域



請將無線充電接收端(藍色圈)放置於無線充電器正中央位置

序號	功能	無線充電狀態
1	有線充電時間	約2小時
2	充電狀態	綠燈常亮
3	充滿電狀態	綠燈亮1分鐘後滅

*為保證正常充電，請使用適合材質標準的無線充電設備進行充電

7 耳機參數

序號	項目	參數規格
1	產品名稱	真無線藍牙耳機
2	電池容量	30mAh
3	頻響範圍	20HZ-20KHZ
4	產品阻抗	32Ω
5	靈敏度	113±3dB
6	產品尺寸	60.8*22*45mm
7	藍牙接收距離	15米(標準環境下)
8	重量	7.6g(不含收納盒)
9	iOS電量顯示	支援
10	藍牙版本	Bluetooth 規格5.0
11	傳輸範圍	2402-2480MHz
12	支援協議	HFP HSP A2DP AVRCP

人因科技股份有限公司
ERGOTECH TECHNOLOGY CO., LTD
產品保證卡
為加速維修處理流程，建議您直接將維修品送至客服中心處理。
235新北市中和區中正路866-2號16樓 客服部
服務電話：(02)2221-9912 傳真：02-22262112 客服免費專線：0800-086580
網站：www.ergotech.com.tw 電子郵件：support@ergotech.com.tw


商品名稱： 姓名： 性別：○男 ○女 電話： 購買店家： E-mail： 地址：	品質保證章 	經銷商店章
--	-----------	-------

※注意事項及產品保固條款※
以下內容均不在保固範圍之內，因此造成不良本公司得酌收費用或不予受理
● 避免強烈的撞擊及重壓，這將會對產品的電子元件造成損壞。
● 勿放置高溫中(超過攝氏60度)；陽光直射處或熱源、密閉的汽車中(特別是夏天)。
● 勿放置潮濕度高的地方(例如浴室、灰塵多的地方)。
● 放置於潮濕位置或進水、泡水導致內部基礎線路腐蝕。
● 企圖拆卸、破壞本產品或自行維修皆會使產品的保固失效。
● 外觀刮傷、掉漆，或因天災、人為因素造成損壞，皆不在保固範圍內，不予換新，但可以酌收維修費用或更換堪用品。
● 因意外、人為破壞、不當使用、安裝、自行變更零件、天然災害或電源問題所造成之損壞，屬於人為因素損壞(如：USB頭折斷、掉機、鏡面或是LCD破裂、外觀嚴重刮傷破壞等)。
● 因使用本產品所造成的軟體資料任何損失或法律問題及責任，本公司概不負責。
● 因產品故障、維修造成機器中的資料損失或服務期間及其前後因「產品」無法使用所致直接或間接損害，本公司概不負責。
● 本服務保證僅適用於「產品」所含的硬體零件，不包含硬體或軟體使用之技術協助，亦不包括「產品」內所含之任何軟體產品。公司不接受「產品」所提供之任何軟體或所提供之任何上述類似軟體之所有明定或隱含之保固，除非於任何附加軟體服務保固書中有明確規定。
● 自購買日起7日內故障換新，主機一年內故障維修保固，電池半年故障維修保固，配件類保固三個月故障換新


2021.9.3.1

ERGOSOUL

TWS Wireless Bluetooth Earbuds User Manual

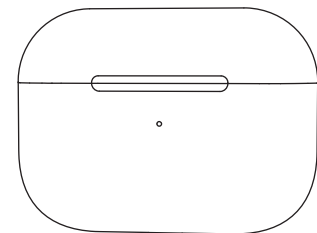

1 Functional Diagram

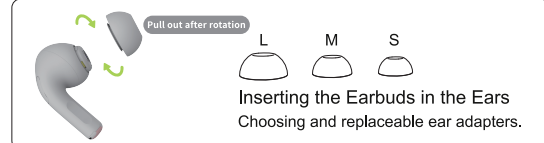

2 HOW TO USE

① TO CHARGE CHARGING CASE

- Connect the lightning cable to Lighting on the charging case
- Plug the USB connector of the cable into a USB Power source
- The indicator light will show Orange while the charging case is charging. Depending on the power delivered to the charging case, the charging case will take approximately 90mins or more to completely charge
- The Green light on for 1 minute when the case is fully charged

② WIRELESS CHARGING



Position on charging pad Put the charging case(wireless charging area in blue circle) on the center of charging pad

NO.	Item	Specification
1	input	155mA(Max Input)
2	Wireless charger input	5V
3	Wireless charger temperature	-20°C~50°C
4	Wireless charger power	5V=0.15 0.75W
5	Wireless Charging Time	About 3.5 H
6	Status of indicator light	Orange light on when charging and Green light on for one minute when fully charged

*Please use Qi standard charging pad

③ TO CHARGE EARPONES

- Put the earphones in the charging case correctly, charging case will start to charging automatically
- The green indicator light flash slowly when the left earphone is charging
- The white indicator light flash slowly when the right earphone is charging
- Both left and right earphone are charging when green and white light flash alternately
- The indicator light will turn OFF when fully charged

④ POWER ON AND PAIRING

- Open the cover of charging case, both earphones will AUTO-ON and AUTO-PAIRING, both earphones will response with a voice prompt: "Dong" when connected with mobile phone successfully
- Enable the bluetooth pairing mode on your phone device. Tap on "ERGOSOUL" to connect. And both earphones will response with a voice prompt: "Dong" when connected with mobile phone successfully



- Earphones will response with a voice prompt: "Dong" when bluetooth signal is cut off, and shutdown 3mins later automatically

⑤ Seamless switching between either earbuds

You have the freedom to wear one or both earbuds, and you are allow to seamless switching between either earbuds at your disposal.

* Take out either earphone from charging case , it will AUTO connect within 20ms

⑥ POWER OFF

- Put the earphones in the charging case correctly, earphones will AUTO-OFF
- Earphone will shutdown automatically in 3mins after disconnected with devices
- Touch either earphone for 12s to shutdown manually
- The battery status of earphones is visible on connected devices when it's running out of power, the earphones will remind you with a voice prompt: "DU, DU", pls recharging in time.

⑦ PHONE & MUSIC

- To Answer Call
Touch either earphone one short
- To End Call
Touch either earphone one short
- To Reject Call
Touch either earphone for 1 second
- To Play and Pause Music
Touch either earphone one short
- To Play the next/ previous song
Touch the right(left earphone twice for next(previous)song

⑧ VOICE ASSISTANT

ANC mode: Press left earphone about 3 seconds after hearing a prompt tone "di" and release to activate ANC or voice assistant

⑨ MODIFY BLUETOOTH NAME

In the bluetooth setting of mobile phone, click the bluetooth name to jump to the input box of modifying bluetooth name, Enter the new bluetooth name and click finish.

⑩ In-ear Sensor

- Turn on/off the in-ear sensor
- IOS: turn on/off in-ear sensor on the interface of bluetooth setting
- Android: touch and hold either earphone for 8s to turn on/off
- Both of Single or TWS mode, the first in-ear earphone will have a prompt tone "dong" when you put on. When you are playing music it will play/pause automatically when you put on/take off earphone

⑪ ANC MODE

Touch and hold the Right earphone for 3 seconds and release after hearing a prompt tone "DI", you can switch over ANC mode/ Transparency mode and Close mode at your disposal

3 PROMPT TONE

Prompt item	Prompt tone description
Turn off	Prompt tone "du"
Connect the mobilephone	Prompt tone "dong"
Disconnect	Prompt tone "dong"
Low battery alert	Prompt tone "du" "du"

4 CHARGING CASE SPECIFICATION

Item	Product status	Description
1	Charging case	Orange light ON (Charging) Green light on for 1 minute and off (charging completed) Green light flash slowly when left earphone charging
2	Earphones charging status	White light flash slowly when right earphone charging Both left and right earphone are charging when green and white light flash alternately

5 EARPONE SPECIFICATIONS

NO.	Item	Specification
1	Frequency response range	20HZ-20KHZ
2	Product impedance	32Ω
3	Capacity	30mAh
4	Sensitivity	113±3dB
5	Product Size	60.8*22*45mm
6	Bluetooth operation distance	15meters(standard environment)
7	Weight	7.6g(Not including storage box)
8	Bluetooth version	5.0
9	Transmission range	2402-2480MHz
10	Supporting agreement	HFP HSP A2DP AVRCP
11	Transmission frequency	2.4GHz band(2.4000-2.4835GHz)